



## Teak Protector

33oz / 1 litre plastic bottle. Water-based formula - both non-toxic and environmentally friendly. Special formula repels water and moisture. Helps prevent stains from food and drinks. Use on weathered teak to retain the silver-grey patina. Each bottle is supplied complete with a special applicator cloth.

### INSTRUCTIONS FOR USE

1. Before using Teak Protector, protective gloves (included in box) and eye protection should be worn. Cover the ground under your work area before starting.
2. Before using Teak Protector on new teak, put the furniture outside to weather for a week.
3. Before using Teak Protector on weathered or dark grey teak, first clean the wood with Gloster Teak Cleaner. If cleaned wood feels rough, sand lightly before treating with Teak Protector.
4. Make sure the teak is 100% dry and free of dust.
5. Shake for at least one minute before use. Apply a thin layer of Teak Protector with a soft cloth (included in box).
6. Allow to dry for 4 hours (humid climates: allow more time for drying) and then apply a second thin coat of Teak Protector. Let the teak dry for 48 hours before exposure.
7. It is recommended that you treat your teak furniture with Teak Protector at least once every year. Tabletops should be treated more often.

*Note - Teak Protector is an almost invisible shield which helps to prevent food (coffee, ketchup, red wine, olive oil, etc.) penetrating into teak causing stains. It also protects the wood against moisture and adhesion of dirt and prevents mildew growth. After aging, the teak will weather to a natural silver-grey patina instead of turning dark grey or green. Should you prefer to keep the golden-brown colour of teak for a longer time, then first treat your furniture with Teak Sealer and then use Teak Protector afterwards.*