
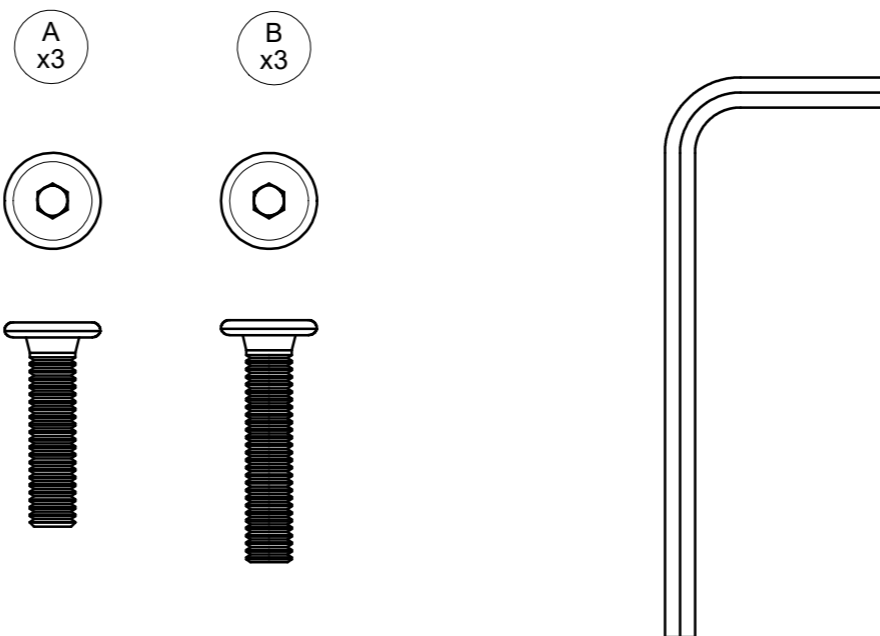



# DANSK SIDE TABLE

ASSEMBLY GUIDE

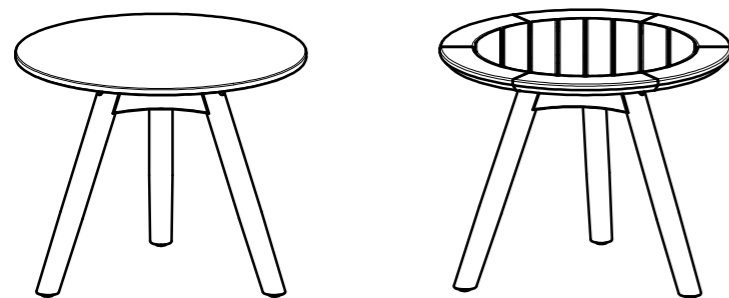


**1**

## Acrylic Stone Top

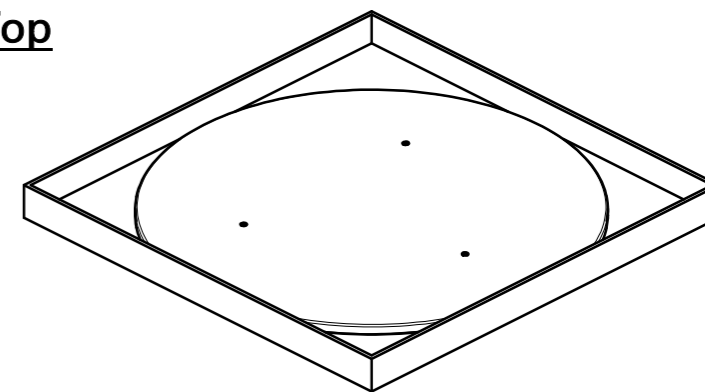

## Teak Top

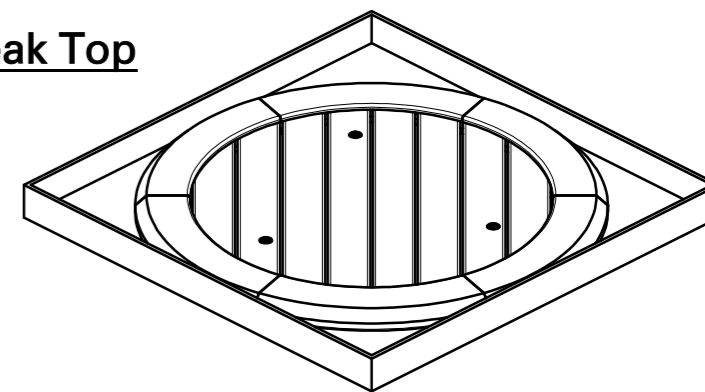

DISTRIBUTED IN THE USA BY:

Gloster Furniture  
1075 Fulp Industrial Road  
PO Box 738  
South Boston  
VA 24592  
USA

DISTRIBUTED IN EUROPE AND ROW BY:


Gloster Furniture GmbH  
Zeppelinrasse 22  
21337 Luneburg  
Germany  
Tel. +49 (0)4131 287530

### GENERAL SAFETY GUIDELINES

Read this guide carefully before using the product.  
Keep this guide for future reference, do not throw away.  
Only use the product in accordance with these instructions. Failure to follow the instructions contained  
Within the user guide can result in damage to the product, and the warranty will become void.  
Any responsibility is disclaimed due incorrect use of the product.  
This product is suitable for use in both residential and contract environments.

Warranty  
www.gloster.com

## 2 Acrylic Stone Top

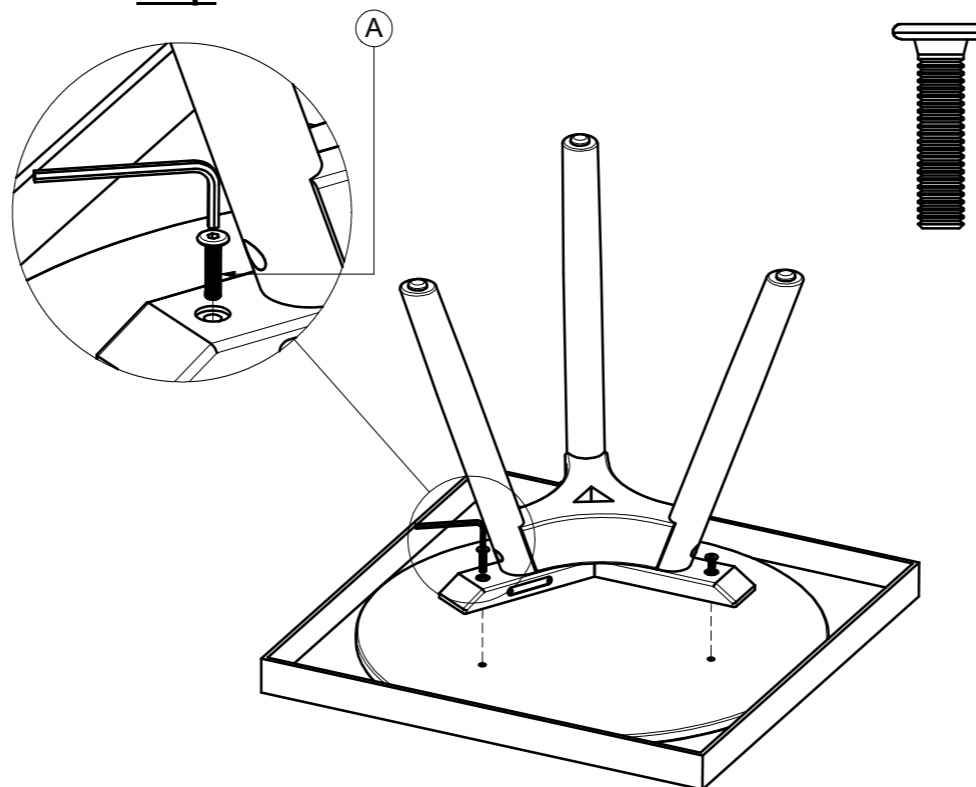

## 2 Teak Top

