

CARE & MAINTENANCE FACT SHEET



BUFFED FINISH TEAK (OUTDOOR USE)

Material Properties

Gloster buffed teak benefits from an enhanced surface preparation procedure, where the natural oils already contained within the teak are brought to the surface and burnished to produce a rich sheen and a consistent colour.

As with natural finish teak, left to age naturally outside, buffed teak will gradually change to a soft, silver-grey as the pigments in the surface layer of the wood begin to fade away. After the first few exposures to water, you should also expect the surface grain to rise slightly. As a part of the buffing process, the surface is wetted before final sanding to raise the grain, so there will be significantly less raised grain on buffed teak than on natural finish teak. We recommend that you allow your teak furniture to weather naturally this way and simply clean thoroughly once or twice a year with our Teak Cleaner. Buffed teak furniture may also benefit from an occasional light sanding to remove any raised grain and restore a smooth finish to the surface. Under no circumstances should a power washer be used to clean teak furniture as this will erode the surface.

Because teak is a naturally oily wood, it is not possible to paint or varnish. Any paint or varnish applied will not adhere properly to the surface and after a short while will start to peel off.

If you wish to retain the golden-brown colour of new teak we also offer a Teak Sealer. Application of Teak Sealer will not affect the strength or longevity of the furniture in any way, just its appearance. If you elect to use Teak Sealer you will be embarking on a regular maintenance programme as Teak Sealer needs to be regularly re-applied to provide continuous protection.

If you intend to store your furniture over the winter, we recommend that you do so in a water-tight garden shed or garage. However, we advise that you do not move teak furniture from the garden straight into a heated indoor room for storage, as the sharp differences in temperature and humidity may cause the wood to split.

To protect teak surfaces from staining and to help maintain the silver-grey patina on weathered teak, we recommend using our Teak Protector. Our Teak Protector creates an almost invisible shield which helps to prevent food (coffee, ketchup, red wine, olive oil, etc.) penetrating into the teak and causing unsightly stains. Teak Protector also helps protect the wood against the ingress of moisture, the adhesion of dirt and prevents mildew growth.



TEAK CLEANER



TEAK PROTECTOR



TEAK SEALER

CARE & MAINTENANCE FACT SHEET



BUFFED FINISH TEAK (OUTDOOR USE)

Cleaning

Gloster Teak Cleaner - 25oz / 750ml plastic bottle with trigger-action head. Water-based formula - both non-toxic and environmentally friendly. Cleans and brightens weathered teak in one, simple step. Each bottle is supplied complete with a special applicator pad.

Instructions for Use

1. Before using Teak Cleaner, protective gloves (included in box) and eye protection should be worn. Cover the ground under your working area before cleaning.
2. First moisten the furniture with clean water.
3. Shake Teak Cleaner before use.
4. Spray Teak Cleaner on furniture and apply evenly with a soft cloth or sponge. Allow to soak for 5 minutes.
5. Brush the furniture clean with a scrubbing pad (included in box) and water in the direction of the grain.
6. Rinse furniture well with clean water.
7. For protection from stains, leave furniture to dry and treat with Teak Protector.



TEAK CLEANER

CARE & MAINTENANCE FACT SHEET



BUFFED FINISH TEAK (OUTDOOR USE)

Protecting

Gloster Teak Protector - 33oz / 1 litre plastic bottle. Water-based formula - both non-toxic and environmentally friendly. Special formula repels water and moisture. Helps prevent stains from food and drinks. Use on weathered teak to retain the silver-grey patina. Each bottle is supplied complete with a special applicator cloth.

Instructions for Use

1. Before using Teak Protector, protective gloves (included in box) and eye protection should be worn.
Cover the ground under your work area before starting.
2. Before using Teak Protector on new teak, put the furniture outside to weather for a week.
3. Before using Teak Protector on weathered or dark grey teak, first clean the wood with Gloster Teak Cleaner.
If cleaned wood feels rough, sand lightly before treating with Teak Protector.
4. Ensure teak is 100% dry and free of dust.
5. Shake for at least one minute before use. Apply thin layer of Teak Protector with a soft cloth (included in box).
6. Allow to dry for 4 hours (humid climates: allow more time for drying) and then apply a second thin coat of Teak Protector. Let the teak dry for 48 hours before exposure.
7. It is recommended that you treat your teak furniture with Teak Protector at least once every year.
Tabletops should be treated more often.

Note - Teak Protector is an almost invisible shield which helps to prevent food (coffee, ketchup, red wine, olive oil, etc.) penetrating into teak causing stains. It also protects the wood against moisture and adhesion of dirt and prevents mildew growth. After aging, the teak will weather to a natural silver-grey patina instead of turning dark grey or green. Should you prefer to keep the golden-brown colour of teak for a longer time, then first treat your furniture with Teak Sealer and then use Teak Protector afterwards.



TEAK PROTECTOR

CARE & MAINTENANCE FACT SHEET



BUFFED FINISH TEAK (OUTDOOR USE)

Sealing

Gloster Teak Sealer - 25oz / 750ml plastic bottle with trigger-action head. Water-based formula - both non-toxic and environmentally friendly. Cleans and brightens weathered teak in one, simple step. Each bottle is supplied complete with a special applicator pad.

Instructions for Use

1. New Furniture - clean with Gloster Teak Cleaner before applying Teak Sealer. For weathered furniture or furniture previously treated with teak oil/sealer - clean thoroughly with Gloster Teak Cleaner before applying Teak Sealer, ensuring all traces of old oil/sealer are removed.
2. Before using the Teak Sealer, protective gloves (included in box) and eye protection should be worn. Cover the ground under your work area before starting.
3. Shake Teak Sealer for at least one minute before use. Insufficient shaking can lead to uneven weathering.
4. We suggest you try the Teak Sealer on a small area first (e.g. the back of a leg) to judge if the colour meets your expectations.
5. Apply a very thin layer of Teak Sealer evenly over the furniture with a dust free cloth (included in box). Do NOT use a paintbrush. Apply a second very thin coat after 60 minutes drying time (humid climates: allow more time for drying).
6. It is recommended that you treat your furniture with Teak Sealer at least once a year.

Note - The last photograph in the series above illustrates the difference between weathered teak (left), cleaned teak (top right) and sealed teak (bottom right).



TEAK SEALER